

**avrak** Inc.

**avstånd installation**



**1.** Place your Avstånd base on the floor where you wish to setup your system. Remember that the center pivot point must be at least 12" from any wall or vertical surface to enable the rack to rotate unobstructed (12 <sup>3</sup>/<sub>4</sub>" inches for the wide rack Avstånd).


The base is hollow so it may be filled with dry sand or lead shot to improve the Avständs' stability. To fill, remove the brown plastic cap located in the top of the base.



**2.** Set the rack on the base and fasten it down at the pivot point using the bolt and washer supplied. This bolt need only be lightly tightened. Rotate the rack to check for clearance.



**3.** Set the top in place by lining up the wood pin mounted in the top with the hole in the top plate of the rack. The top will be held in place by the four Velcro tabs. If you have used the minimum wall clearance asked for in step one the top will have to be removed to rotate the rack. If you wish to leave the top in place and rotate your rack you will have to reposition your base accordingly.

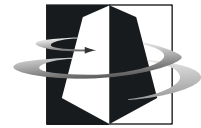

**avrak** Inc.  
avstånd installation

4. To adjust the shelves use the Allen key supplied to loosen and tighten the shelf locking bolts. Use a measuring tape or level to position your shelves exactly where you want.

When you have your components in place and find that you wish to 'fine tune' the shelf adjustment, **DO NOT** loosen all four bolts at the same time. Instead, loosen only two at a time. This will keep your component from suddenly dropping.



5. Use the Velcro strips on the back of each shelf to neatly hold your wires in place.



6. If you have ordered your Avstånd with the optional side panels, they are the last component to be attached to your Avstånd. There is one left and one right panel. The rounded edges are to face forward.

The side panels are held in place by four black plastic clips. Carefully line up the bottom clips first, they will support the weight of the side panel. These clips are very strong so a considerable amount of pressure may be needed to have them "click" into place. Do not "hammer" them, the sudden shock may break the clip. These clips are pre-aligned at the factory so no adjustment should be necessary. To remove the side panel, remove the bottom first by exerting even pressure on the front and back edge of the panel.

**Note:** *When reaching the maximum weight capacity, of the Avstånd, grip the unit on the lower half to rotate. This will avoid putting any undue stress on the top of the unit when rotating.*

